


# BACK OF POLYMARBLE PEDESTAL

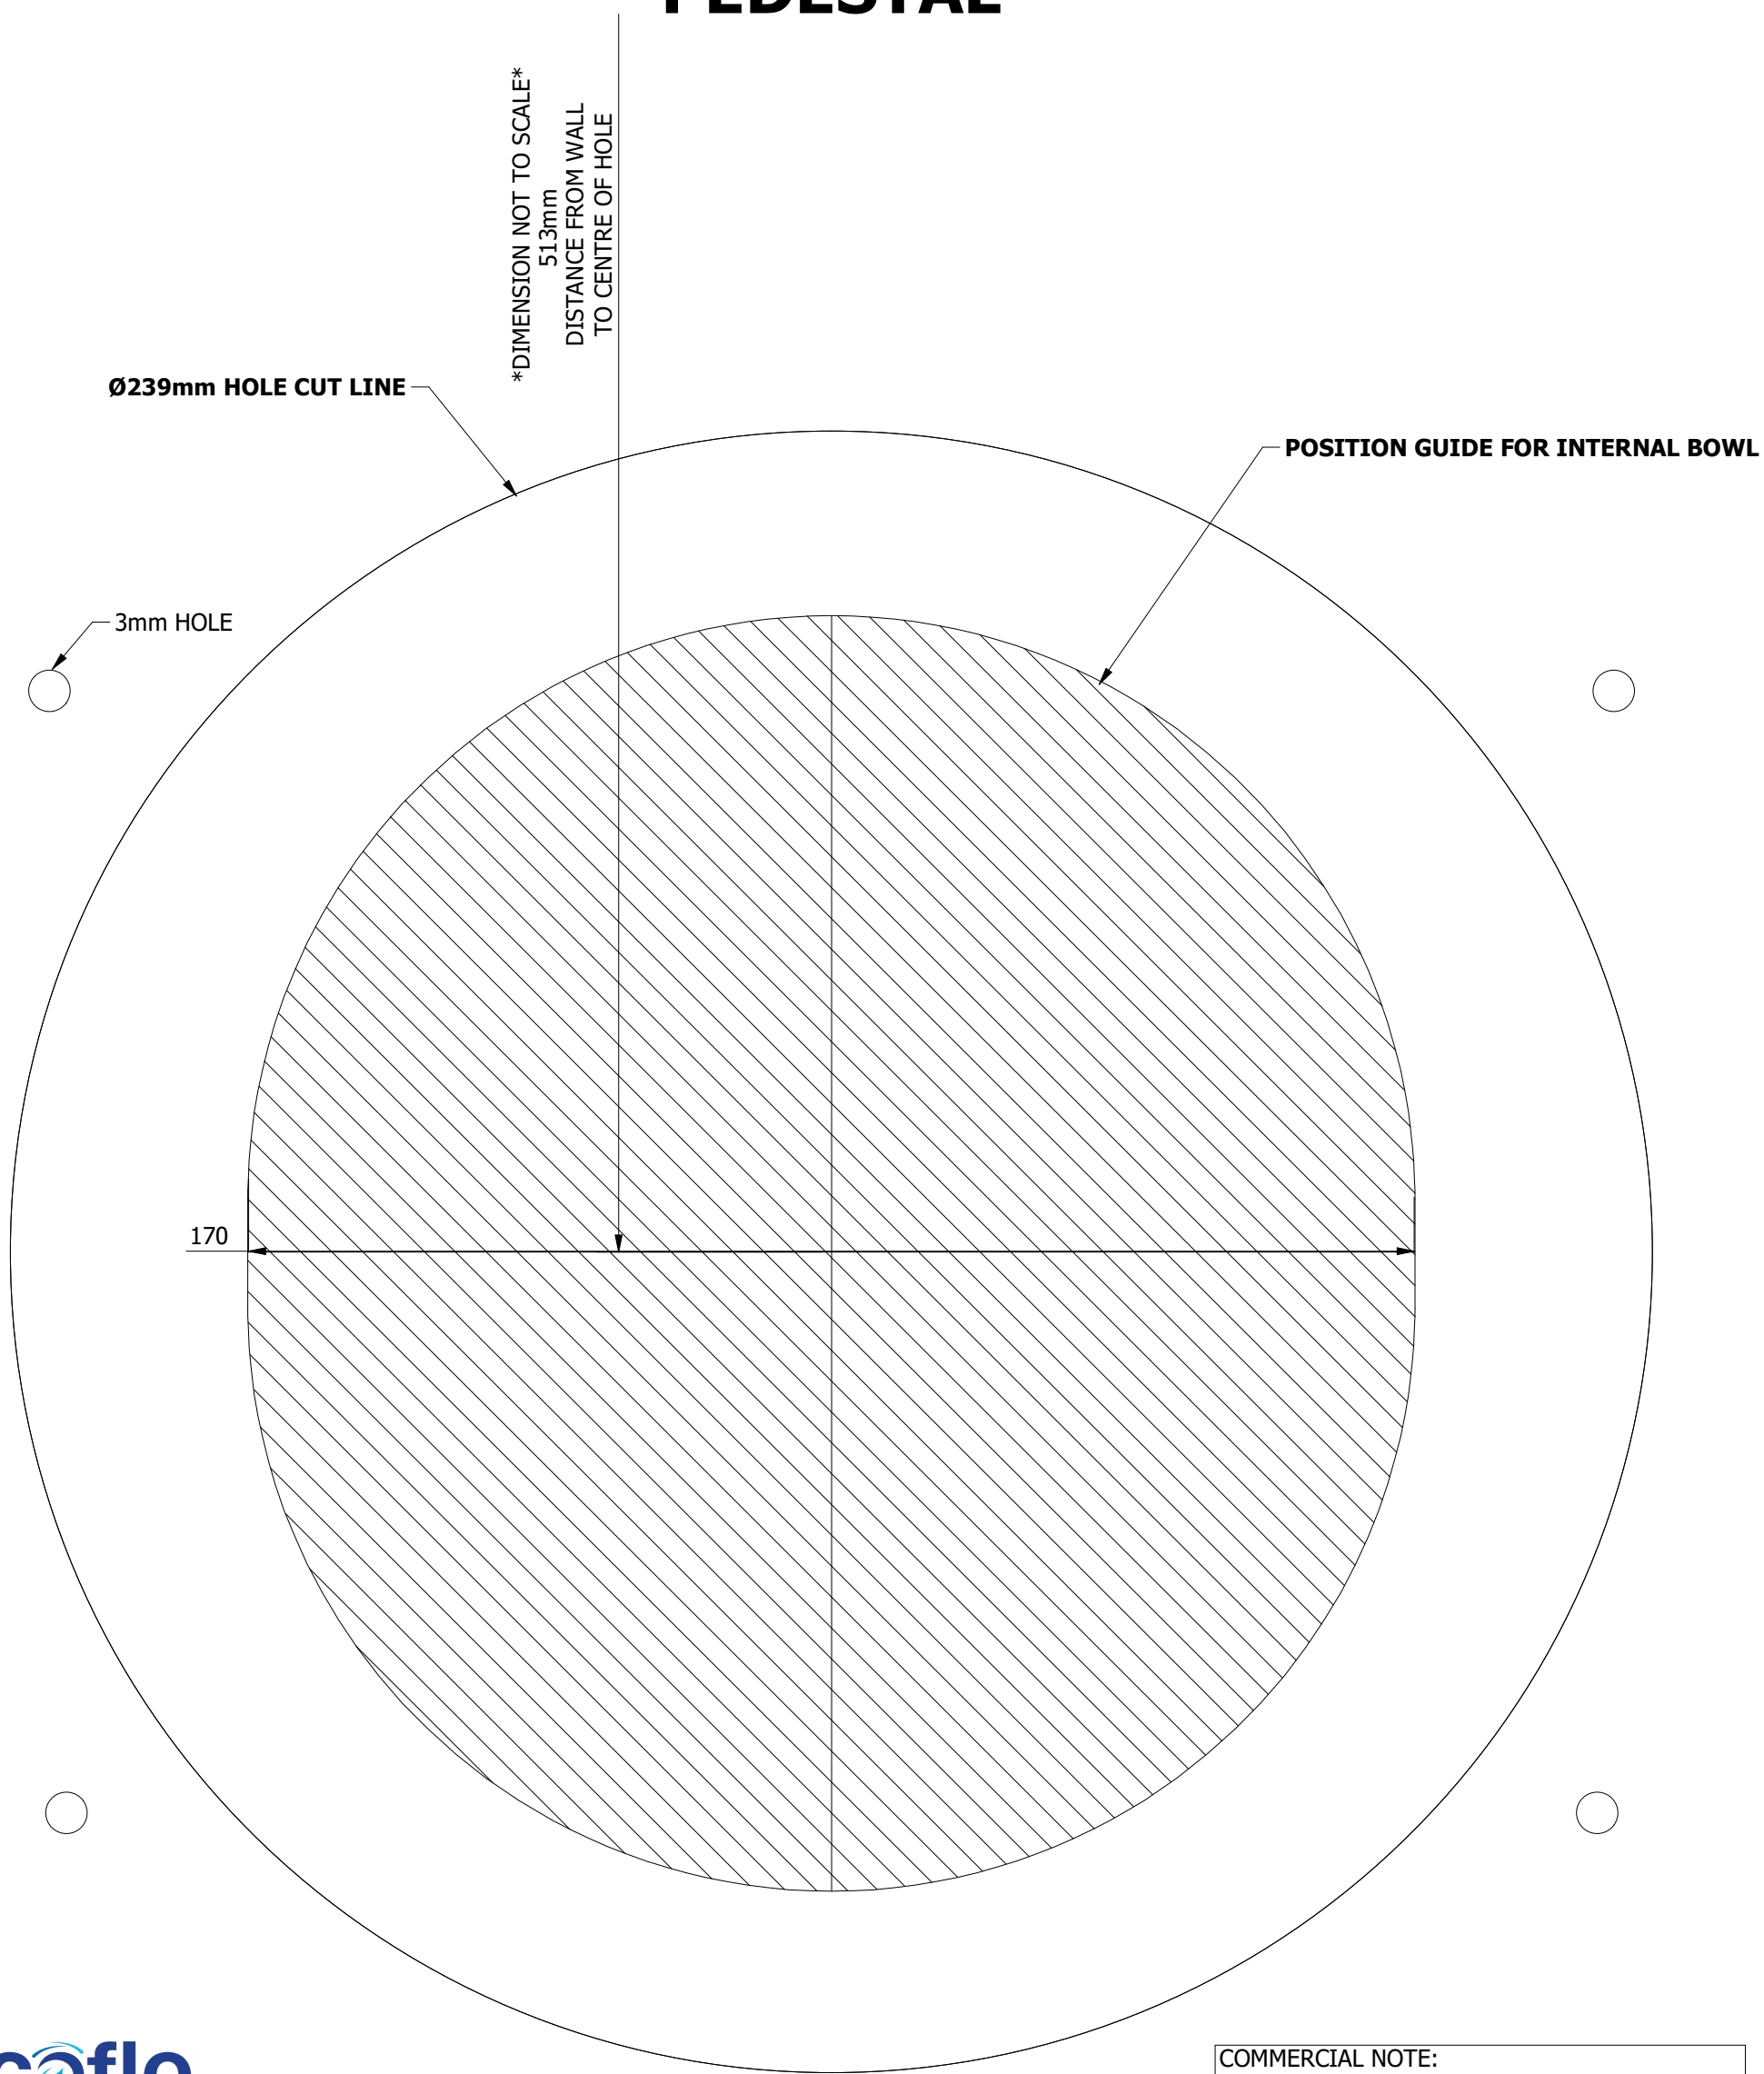

COMMERCIAL NOTE:  
AS1428.1 REQUIRES FRONT OF PAN TO BE 800  
±10 FROM WALL FACE.

## INSTALLATION INSTRUCTIONS

1. Check this template is correctly scaled by measuring length and width as shown. Replace this template if dimension is  $\pm 1$ mm. This template is the minimum clearance from wall.
2. Place template on floor in approximate position, then place pedestal on template and confirm pedestal location is suitable. Check no joists, pipe or cables are under the cut area.
3. Align template to pedestal by matching the hatched pattern to the internal pedestal hole. Keep the template axis square to the wall.
4. Pin or tape template to floor, then remove pedestal.
5. Cut out hole along the outer ring, keeping cut within the line width (or scribe through template to mark floor if cut cannot be made with template in position.)
6. Insert chute to check hole shape.