

Replacing shear pin 45 och 60

1. Unplug the toilet. Disconnect the ventilation pipe.



2. Remove the top by removing the nut holding the upper switch and the nut holding the compost cover.



3. Remove the thermostat dial




4. Push the seat switch inside the plastic.




5. Lift off the top.




6. When the top is off, there are 4 screws holding the gear box in place.

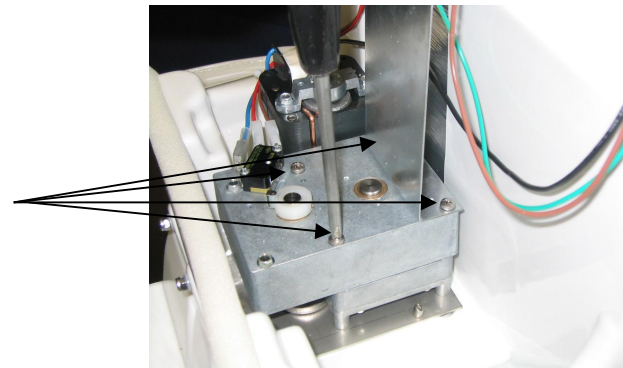


7. Loosen the holder for the cables on the electrical cassette.

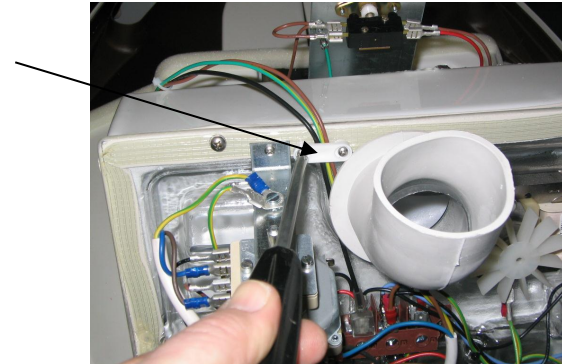


8. Loosen the cables to the motor. Make a note of where they were placed.

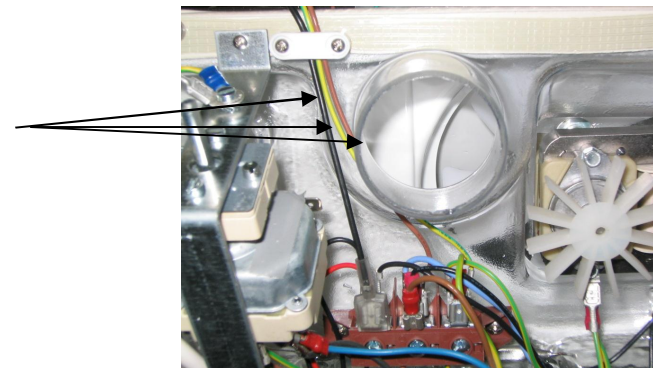

9. Lift off the mixer motor assembly.

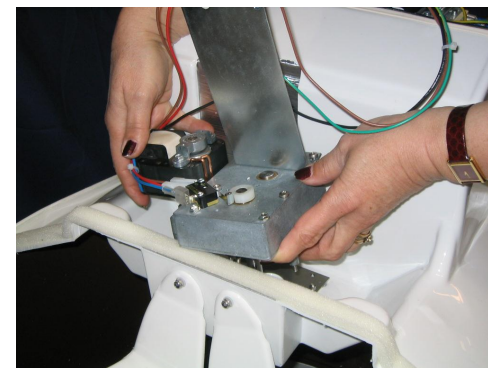


10. Check that the shear pin is off, the axle is smooth and no pin is sticking out.

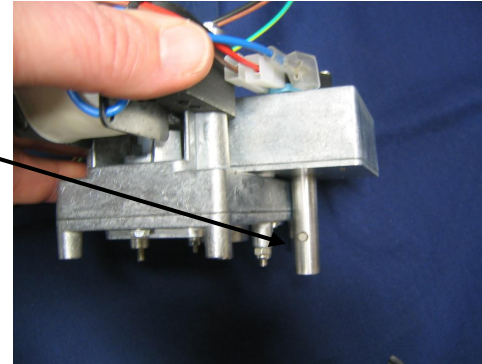


11. Put the motor assembly against something solid and remove remainders of the old shear pin. Use the new shear pin to get the remainders out.



12. Put the new shear pin in through the hole in the axle. The shear pin should stick out as much on each side.

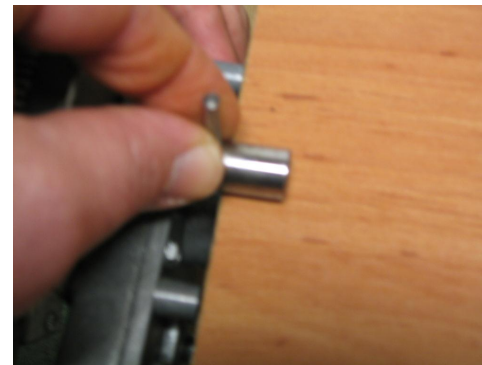

13. Put the motor assembly back. Fasten the 4 screws really tight and check that the motor is in place.

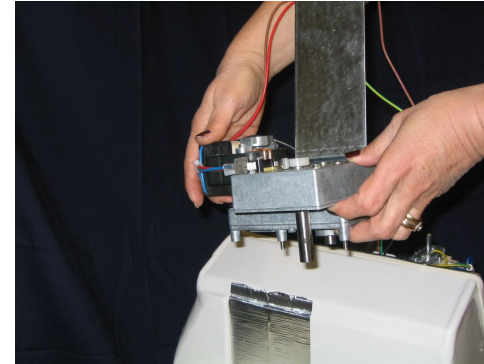

14. Put the cables back in the electrical cassette, as well as the holder.

15. Test the mixing.

16. Put the top back on as well as the vent pipe.



Swedish Ecology AB, Klippan 1J, 414 51 Göteborg

www.mulltoa.com

031-42 29 30